

Lab - System Utilities

Introduction

In this lab, you will use Windows utilities to configure operating system settings.

Recommended Equipment


· A computer running Windows

Instructions

Part 1: Custom Management Console


Step 1: Explore the management console.

- a. To open the Microsoft Management Console, click **Start**, and search for **mmc**. Click **Yes** to allow Microsoft Management Console to make changes to the computer.
- b. In the Console1 [Console Root] window, you can build a custom console. Click File > Add/Remove Snap-in.
- c. In the **Add or Remove Snap-ins** window, you can add a folder snap-in. Scroll down the Available snap-ins: pane to locate the **Folder** snap-in. Select **Folder** and click **Add>**.
- d. To add the Link to Web Address snap-in, scroll down the Available snap-ins: pane and select Link to Web Address. Click Add>. In the Link to Web Address wizard window, enter http://www.cisco.com in the Path or URL: field, click Next> to continue.
- e. In the Friendly name for the Link to Web Address snap-in box, enter Cisco and click Finish to continue.

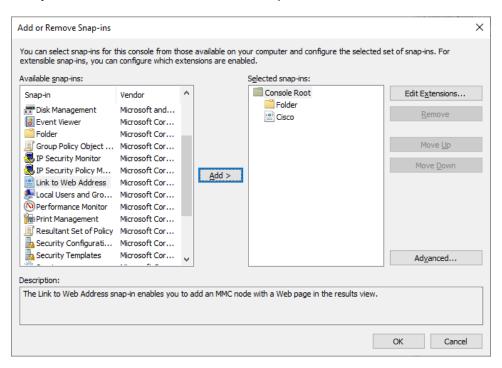

Step 2: Create a custom management console.

- a. To add snap-ins to the folder snap-in, click **Advanced**.
- b. The Advanced window opens. Select Allow changing the parent snap-in. Click OK.
- c. A drop-down menu appears for Parent snap-in. In the Parent snap-in box, select Folder.

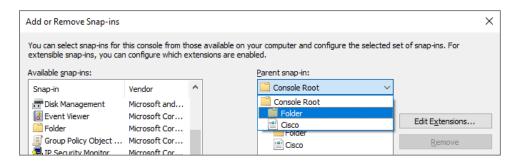

- d. Add the following snap-ins from the Available snap-in: pane: **Computer Management**, **Device Manager**, and **Disk Management**. In each of the snap-in windows, click **Finish** to select to use the snap-in to manage the Local Computer or This computer.
- e. Click **OK** to continue to exit the Add or Remove Snap-ins window.
- f. In the **Console1** window, right-click the **Folder** icon and select **Rename**. Change the name of the folder to **Management Tools**.
- g. To save the custom console, click **File > Save As**. Change the file name to your name. Example: **John's Console**. Change the **Save in** box to **Desktop**. Click **Save**.
- h. Close all open windows.
- i. On the desktop, double-click the **Console** icon that contains your name to re-open the console with your snap-ins. Click **Yes** to allow this application to make changes to your device as necessary.
- Review the Management Tools folder by double-clicking on the tools.
- k. Within your custom console, navigate to the Event Viewer.

Question:

What was the path you use to navigate to the Event Viewer?

Type your answers here.

. Close the **Console** window when you finish your review. Click **No** when prompted to save the changes.

Part 2: Registry Editor

Step 1: Change your desktop background settings.

a. Right-click the Desktop > select Personalize.

Question:

What is the background picture?

Type your answers here.

b. In Windows 10, select **Solid color** in the Background drop-down list. Choose a **blue** background color.

In Windows 8.1 and 7, click **Desktop Background**. Select **Solid Colors** in the Picture Location drop-down list. Choose a **blue** background color.


- c. Click **Save changes**. The computer screen should now have a blue background. If not, ask the instructor for assistance.
- d. Close all open windows.

Step 2: Open the registry editor.

 To open the Registry Editor, click Start and type regedit. Click Yes to allow Registry Editor to make changes to the computer.

Note: Do not make any changes in the Registry Editor without instructor permission.

- b. Select and expand the **HKEY_CURRENT_USER** entry.
- c. Expand Control Panel. Click Colors. Click Background in the right panel.

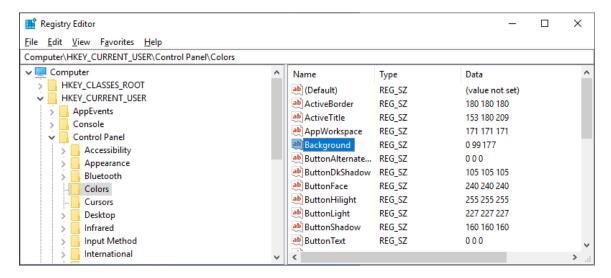

Question:

What is the data value of the Background (hint – it has three numbers that correspond to red, green, and blue)?

Type your answers here.

Step 3: Export a registry key.

You will export the HKEY CURRENT USER\Control Panel\Colors folder.

- a. In the left pane, select the **Colors** folder and click **File > Export**.
- b. Save the file to the Desktop with the name BlueBKG.
- c. At the desktop, right-click the **BlueBKG.reg** icon and select **Edit**.
- d. Notepad opens displaying the contents of BlueBKG.reg.

Question:

What is the data value of the **Background**?

Type your answers here.

- e. Close the **BlueBKG.reg Notepad** window.
- f. Open the Personalization window by right-clicking the **Desktop > Personalize > Desktop Background**. Select a **red** background color.
- g. Click Save changes. Close the Personalization window.

- h. The desktop background should be red. Click the Registry Editor window.
- On your keyboard, press F5 to refresh the Registry Editor window.

Question:

What is the data value of the Background? Compare the new value in the Registry to the value saved in BlueBKG.reg.

Type your answers here.

Step 4: Import a registry file.

You will import the **BlueBKG.reg** file to change the Desktop ground back to blue.

- a. Click the Registry Editor window.
- b. Click File > Import. Locate and click the BlueBKG.reg file then click Open.
- c. The **Registry Editor** informational message opens letting you know that keys and values have been successfully added to the registry. Click **OK**.
- d. Select the Registry Editor window.

Questions:

What is the data value of the Background?

Type your answers here.

What is the color of the desktop?

Type your answers here.

e. Restart the computer.

Question:

What is the color of the desktop?

Type your answers here.

- f. Reset **Display Properties Background** to the original settings.
- g. Close all open windows.
- h. Delete the custom console and BlueBKG file on the desktop.

Reflection Question

1. Why would it be beneficial to add snap-ins to the mmc that are for other computers on the network?

Type your answers here.

2. After restarting the computer, why was the desktop color changed?

Type your answers here.